

M2TECH

HIFACE TWO

192KHZ/24BIT DIGITAL AUDIO INTERFACE

USER MANUAL



REV. PRA – 3/2012

Warning!

Changes or modifications not authorized by the manufacturer can invalidate the compliance to CE regulations and cause the unit to be no more suitable to use. The manufacturer refuses every responsibility regarding damages to people or things due to the use of a unit which has been subject to unauthorized modifications or to misuse or to malfunction of a unit which has been subject to unauthorized modifications.



This unit is compliant with the following CE regulations when an USB cable less than 3m is used: CEI EN 55022:2009 Class B (Radiated Emissions), CEI EN 55024:1999, CEI EN 55024:A2/2003, CEI EN 55024:IS1/2008 (Radio Frequency Electromagnetic Fields, 50Hz Magnetic Field Immunity Test and Electrostatic Discharges – ESD).

Recycling



The label above, printed on the product case, indicates that the product, when no more usable, can't be treated as generic garbage, but must be disposed of at a collection point for recycling of electrical and electronic equipment, in compliance with the WEEE regulation (Waste of Electrical and Electronic Equipment).

By making sure that this unit is correctly recycled, you will help preventing potential damages to environment and human health, which could be caused by a wrong treatment of this product as generic garbage. Materials recycling helps saving natural resources. For more in-depth information about recycling this product, please contact M2Tech Srl.

WARNING: the information contained in this manual are considered to be reliable and accurate. M2Tech reserves the right to change or modify the information any time, without prior advice. It's up to the customer to ensure that the manual being consulted is the latest version.

Dear customer,

thank you for purchasing HIFACE TWO. What you have is a first-rate USB-to-S/PDIF converter with many unique features conceived to obtain the best audio performance out of a music file.

Even if getting digital music out of a PC, a Mac or a Linux computer is nowadays quite simple, much harder is to obtain the best sonic performance from it, due to intrinsic limits in USB 1.1 audio standard and the implementation of digital audio interfaces in computers. Please visit M2TECH website (www.m2tech.biz) to find extensive literature about this topic.

HIFACE TWO overcomes all the limits of usual USB-to-audio interfaces by exploiting the powerful performance allowed by USB 2.0 Audio class and by using asynchronous data transfer, along with a sophisticated electronic design.

HIFACE TWO is available with either RCA or true 75 Ohms output connector which suites virtually all DAC's and A/V receivers around.

We feel that your expectations will be fulfilled by HIFACE TWO: you'll hear your DAC and your music files in a way like never before, prepare for a whole new experience!

Nadia Marino, CEO

Please annotate here your HIFACE TWO serial number and purchase date for future reference:

Serial number: _____

Date of purchase: _____

INDEX

1. Connections.....	5
2. Connection to the host.....	6
3. True plug'n'play operation with Mac.....	7
4. True plug'n'play operation with Linux.....	8
5. Windows driver installation.....	9
5.1. Obtaining the driver.....	9
5.2. Installing the driver on a Windows-based PC.....	9
5.3. Uninstalling the driver.....	12
6. Configuring the computer to use HIFACE TWO.....	15
6.1. Configuring a PC with Windows XP.....	15
6.1.1. Configuring for Direct Sound with Windows XP.....	15
6.1.2. Configuring for ASIO with Windows XP.....	16
6.2. Configuring a PC with Windows Vista or Windows 7.....	17
6.2.1. Configuring for Direct Sound with Windows Vista or Windows 7.....	17
6.2.2. Configuring for Kernel Streaming with Windows Vista or Windows 7.....	18
6.2.3. Configuring for WASAPI with Windows Vista or Windows 7.....	18
6.2.4. Configuring for ASIO with Windows Vista or Windows 7.....	18
7. Configuring the player for Kernel Streaming: some examples.....	19
7.1. FooBar.....	19
7.2. Winamp and MediaMonkey.....	20
8. Configuring the player for WASAPI: an example.....	22
8.1. FooBar.....	22
9. Configuring the player for ASIO: an example.....	23
9.1. FooBar.....	23
10. Interface Special Features.....	24
10.1. Precision oscillators.....	24
10.2. Asynchronous transfer mode.....	24
10.3. Output connector choice.....	24
10.4. Powering the HIFACE TWO with an external power supply.....	24
11. Technical Specifications.....	25

1. Connections

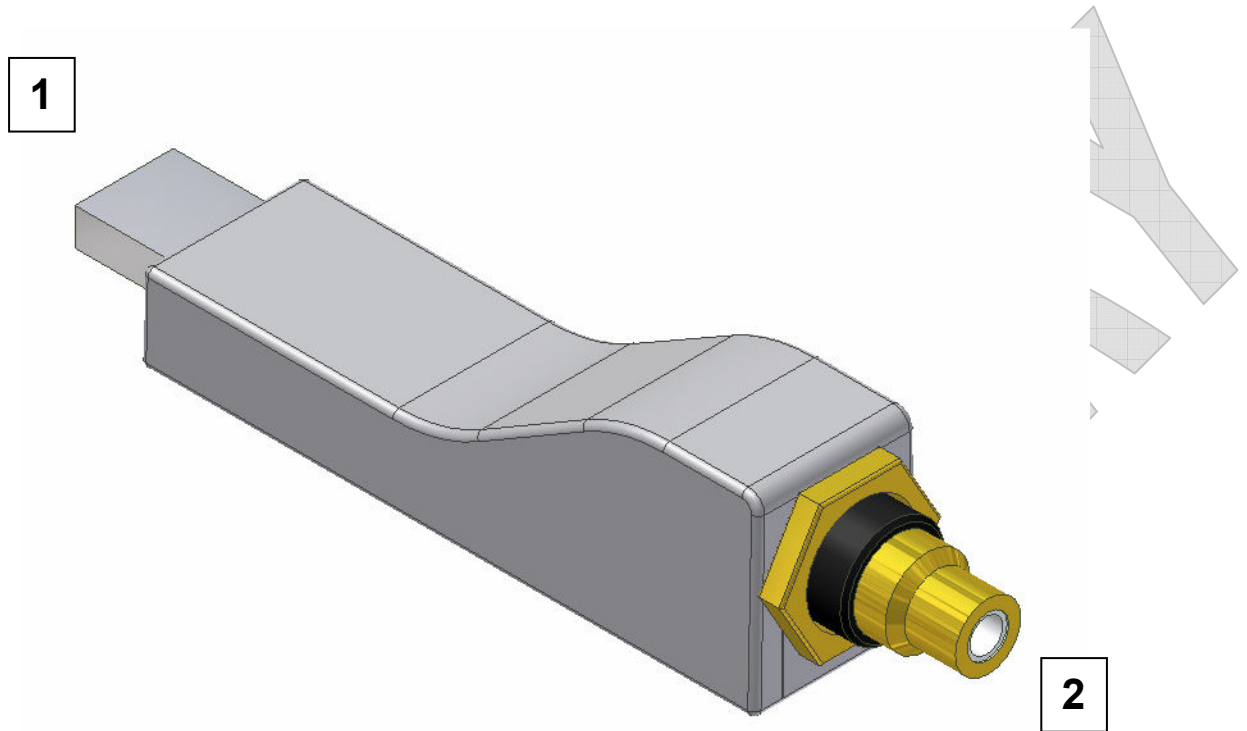


Figure 1

1) USB input. Connect directly to the USB 2.0 port of a PC, Mac or Linux-based computer, or use an USB extender (A male to A female). In the latter, the extender must be compliant with USB 2.0 and less than 3m, otherwise the bus performance will decrease and the correct operation of the interface will not be guaranteed. USB type A male connector

2) S/PDIF output. Connect to the DAC input with a 75 Ohms digital cable. RCA male connector or BNC 75 Ohms male connector.

2. Connection to the host

ADVICE: Windows users must install the driver prior to connecting the hiFace to the PC (please refer to section 5).

Please refer to section 1, “Connections”.

Connect the HIFACE TWO to the host USB 2.0 port by inserting its USB plug (Figure 1, 1) into the host socket. If straight insertion is difficult or when in need of avoiding straight insertion, an USB 2.0 extender cable (A male to A female) can be used. Please avoid using extenders more than 4m, to avoid invalidating the bus performance.

If your computer has a Windows operating system and a driver hasn't been installed prior connecting the HIFACE TWO, an error message may appear and you may need to disconnect the HIFACE TWO and install the driver (see section 5.3).

3. True plug'n'play operation with Mac

Mac computers with OSX 10.6.4 and later have a native support for audio devices compliant with USB 2.0 Audio class. This means that the driver is already included in the operating system and the user needs not to install anything: just connect the HIFACE TWO to your Mac and it will be immediately recognized by the OS and ready to use. Macs with older OS need update to use the HIFACE TWO.

PRELIMINARY

4. True plug'n'play operation with Linux

Linux has a native support for audio devices compliant with USB 2.0 Audio class based on ALSA. This means that the driver is already included in the operating system and the user needs not to install anything: just connect the HIFACE TWO to your PC with Linux and it will be immediately recognized by the OS and ready to use. ALSA version needs to be 1.0.24 or later.

PRELIMINARY

5. Windows driver installation

5.1. Obtaining the driver

The Windows driver for HIFACE TWO is available on the M2Tech website, in the download page (www.m2tech.biz/download.asp). Download the exe file containing the driver package and save it to a folder in your PC. This is a self-extracting file which will deliver a folder. Double-click on it to extract the folder. Please pay attention to the location where the folder will be extracted to avoid losing it into the hard disk.

5.2. Installing the driver on a Windows-based PC

Open the folder produced by the self-extracting exe file. Double-click on “setup.exe” and follow the indications provided by the setup program. First, the installation wizard will ask for authorization to start installation. Accept. Then, the wizard will check for system features. At a certain point, it will ask you to plug the HIFACE TWO in one of the USB ports (Figure 2).



Figure 2

Follow the indications and plug the device in one port, then click on “Install”. The installation process continues showing the progress (Figure 3).

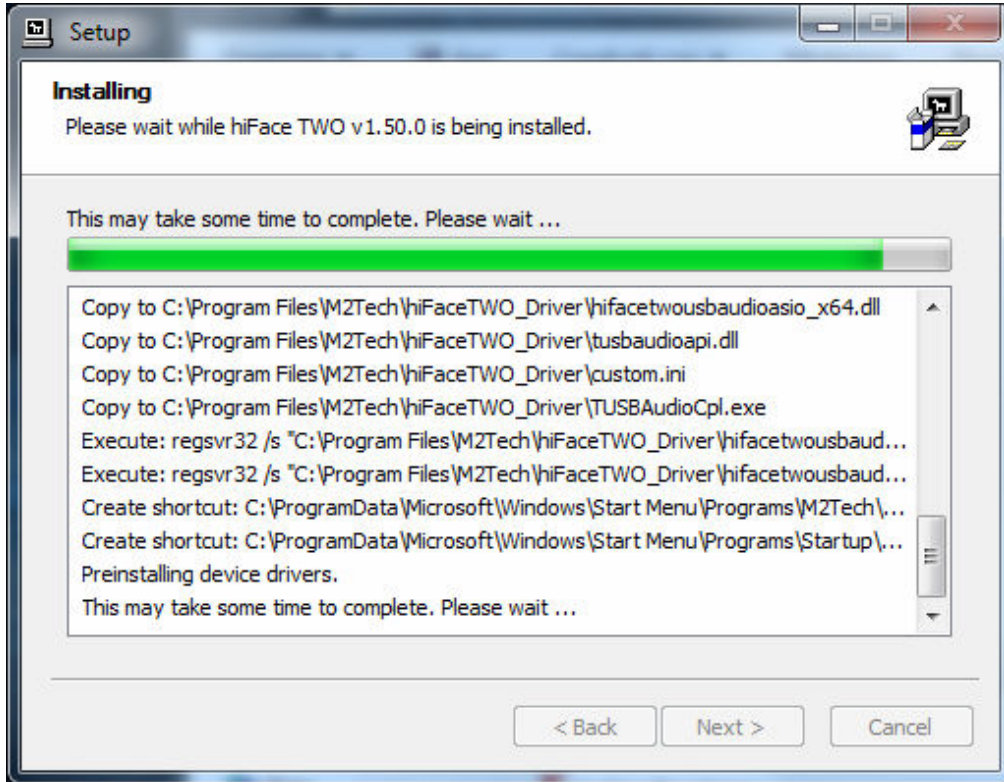


Figure 3

At the end of the installation process, the wizard notify the completion (Figure 4 on next page). Click on “Finish” to complete the installation.

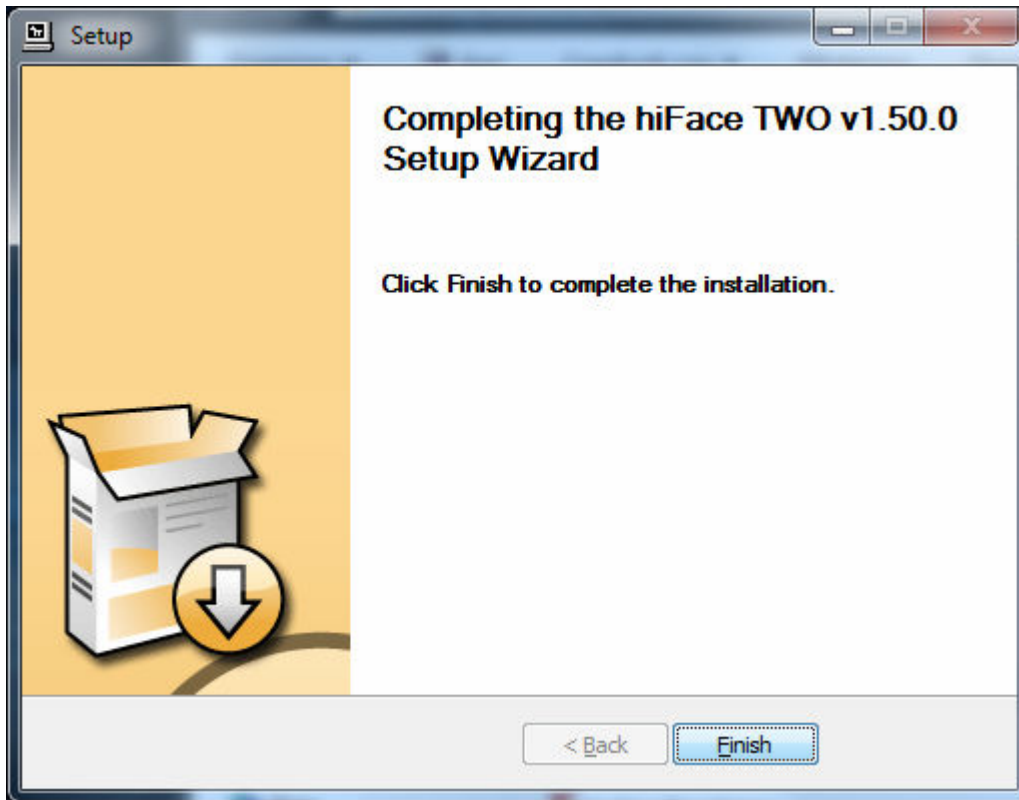


Figure 4

5.3. Uninstalling the driver

Sometimes it is necessary to uninstall the driver to roll back to a previous version. Uninstall is a quite simple procedure.

Go to the control panel and launch the “Application Installation” utility (Figure 5). Look for the HIFACE TWO driver item in the list. Double-click on it to launch uninstalling.

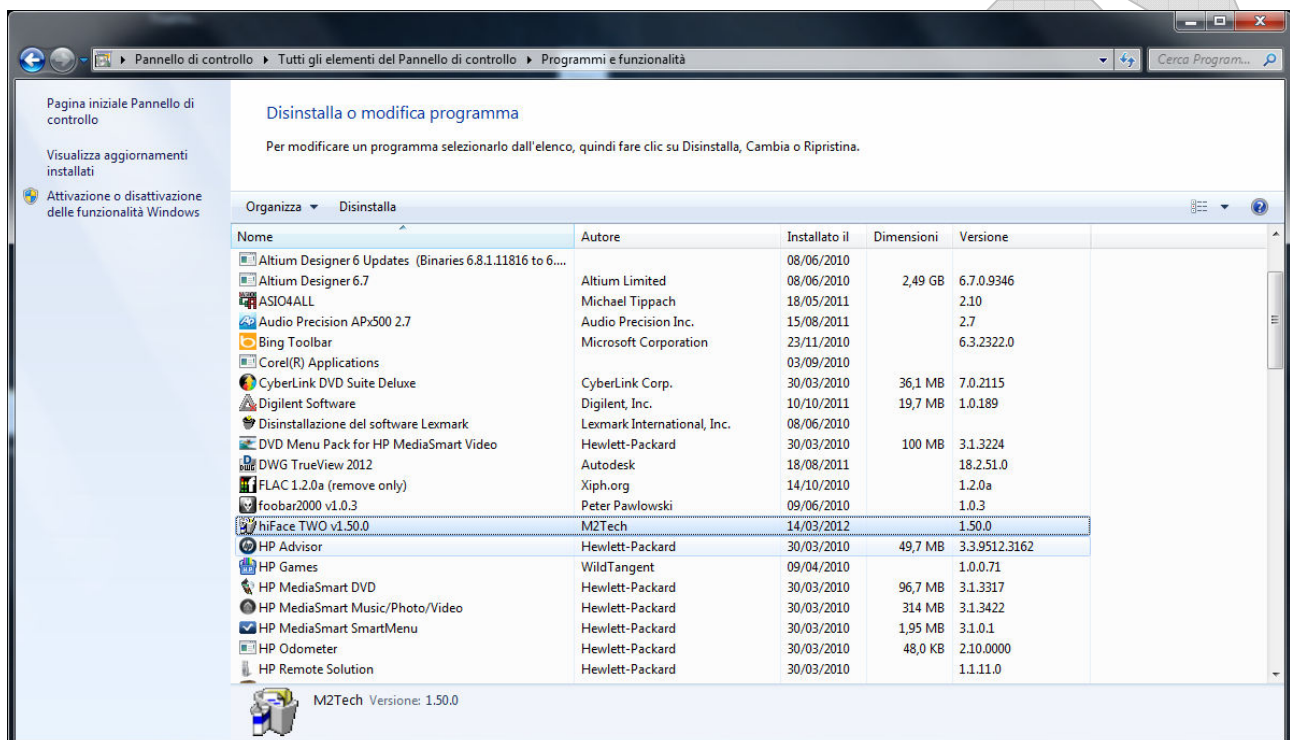


Figure 5

The installation wizard, which also handles uninstalling, will show up (Figure 6 on next page). Click on “Uninstall” to start uninstalling.



Figure 6

At this point, the wizard will show up the installation progress (Figure 7), up to the end.

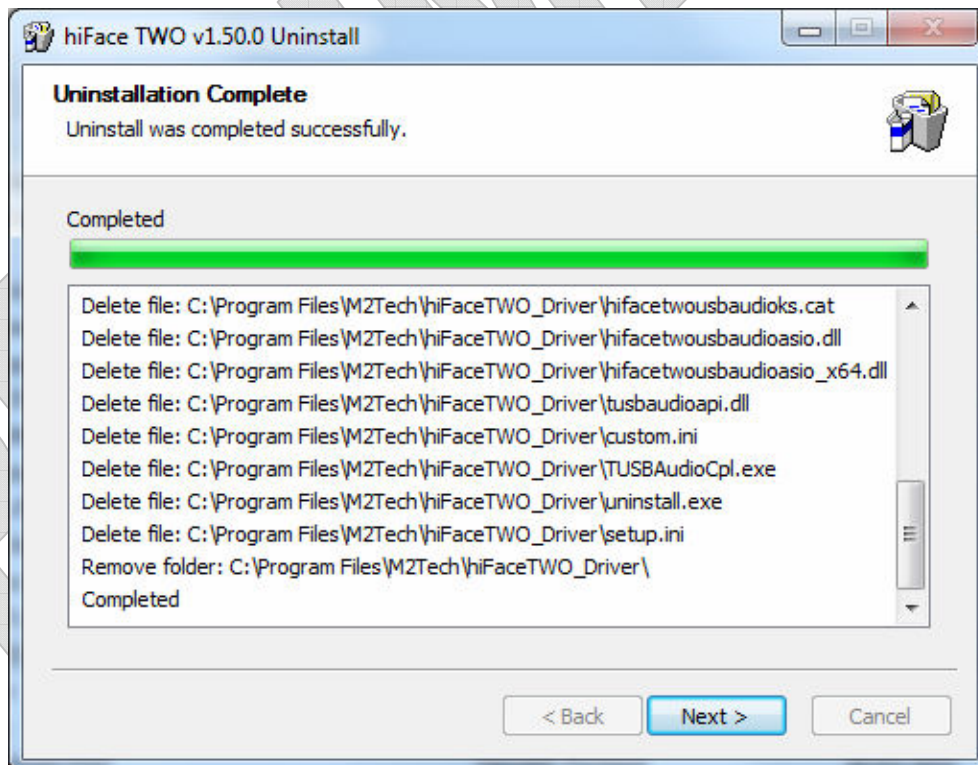


Figure 7

After the uninstalling of all files related to the driver is complete, the “Next” button will be enabled. Click on it. The final message will appear (Figure 8). Click on “Finish” to complete uninstalling.

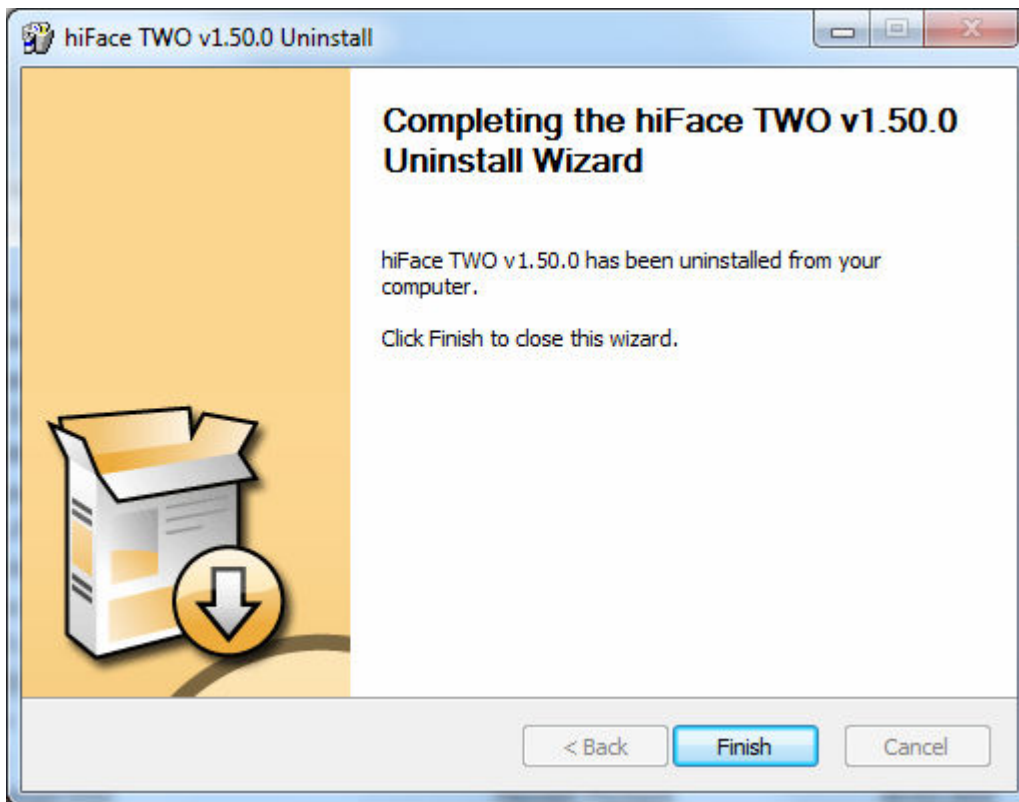


Figure 8

6. Configuring the computer to use HIFACE TWO

6.1. Configuring a PC with Windows XP

A PC with Windows XP can use HIFACE TWO in two different ways: Direct Sound (DS) and ASIO. The first mode is suitable for most players, such as Windows Media Player and iTunes, or for Internet streaming, while the second can be chosen (for better performance) with players which can operate in ASIO mode. ASIO is widely used by professional audio software tools and ensures bit-perfect performance.

6.1.1. Configuring for Direct Sound with Windows XP

Connect HIFACE TWO to your PC. Then, go to the Control Panel and launch the Sound and Audio Peripherals utility. Select the Audio tab. In the Predefined Peripheral drop-down menu of the Playback area, select “M2Tech Audio 2.0 Output” (see figure 9).

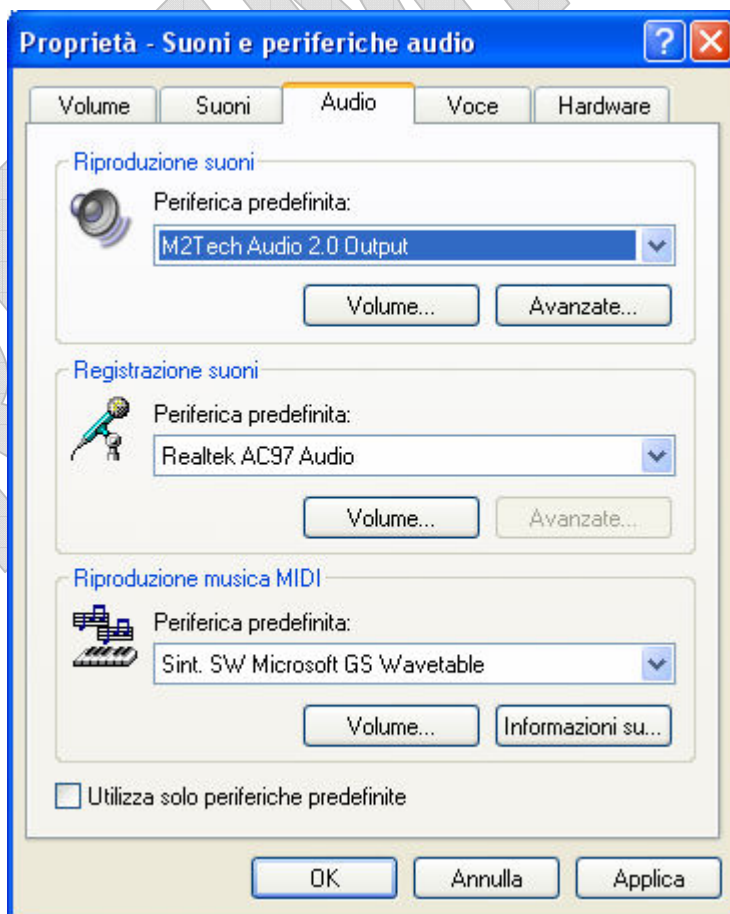


Figure 9

Then, select the “Voice” Tab. Again, select “M2Tech Audio 2.0 Output” in the drop-down menu of the Playback area. Click on OK button. Please be advised that even if the peripheral is listed as “kernel streaming”, it will operate in Direct Sound mode when listed here.

From now on, unless HIFACE TWO is disconnected or settings are changed again, HIFACE TWO is the audio peripheral all audio programs will use when operating in direct sound mode.

6.1.2. Configuring for ASIO with Windows XP

ASIO has no standard setting in Windows XP. ASIO must be selected in the specific player you choose to use.

For example, when using FooBar, with HIFACE TWO connected to the PC, go to the File/Preferences/Playback /Output tab and select “ASIO: hiFace Two” as output device. Other players will require different settings (see section 5).

6.2. Configuring a PC with Windows Vista or Windows 7

A PC with Windows Vista or Windows 7 can use HIFACE TWO in four different ways: Direct Sound (DS), Kernel Streaming (KS), WASAPI and ASIO. DS is suitable for players which can't operate in Kernel Streaming mode nor with WASAPI or for Internet streaming; KS can be chosen (for better performance) with players which can operate in Kernel Streaming mode (such as FooBar, Winamp, Monkey Media, JRiver). WASAPI (Windows Audio Standard API) is a standard interface for audio players which allows to get the same performance of KS with applications which can't operate in KS mode, at the cost of higher CPU load. Much the same can be told about ASIO.

6.2.1. Configuring for Direct Sound with Windows Vista or Windows 7

Open control Panel and select Hardware and Sounds. Under Audio, click on Manage Audio Devices. The following windows will appear, in which HIFACE TWO is listed. Set HIFACE TWO as predefined device. Then, click on OK.

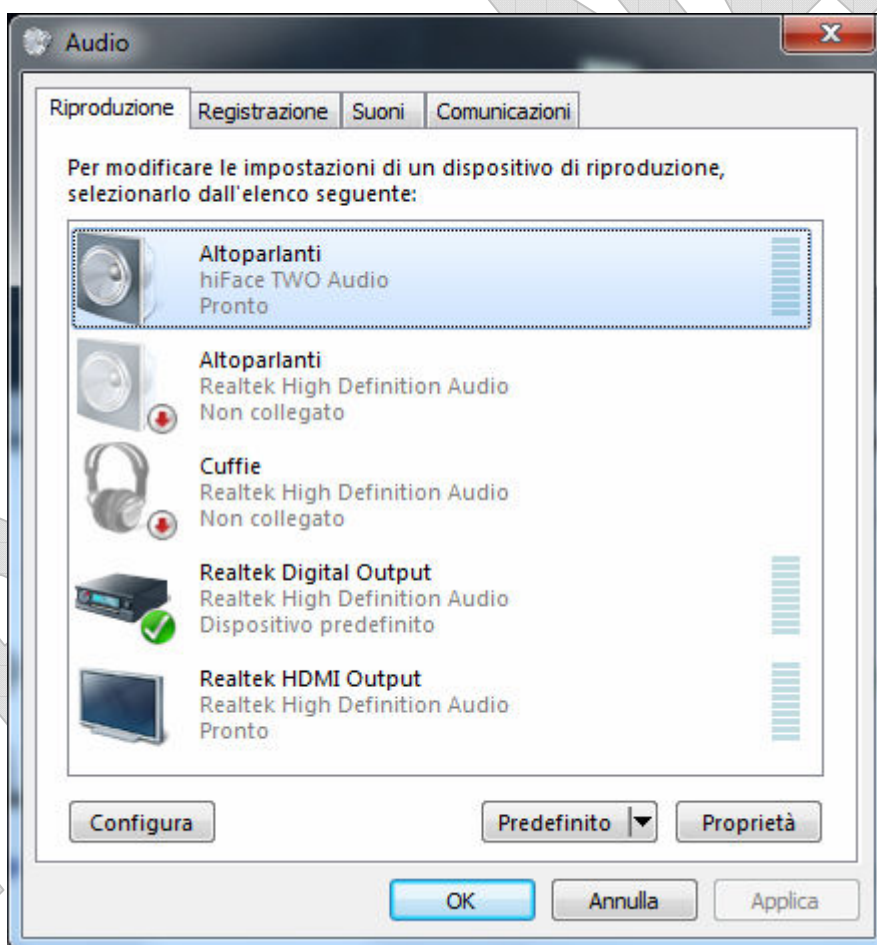


Figure 10

6.2.2. Configuring for Kernel Streaming with Windows Vista or Windows 7

As for Windows XP, Kernel Streaming has no standard setting in Windows Vista and Windows 7. KS must be selected in the specific player you choose to use.

For example, when using FooBar, with HIFACE TWO connected to the PC, go to the File/Preferences/Playback /Output tab and select “KS: M2Tech Audio 2.0 Output” as output device.

Other players will require different settings (see section 5).

6.2.3. Configuring for WASAPI with Windows Vista or Windows 7

As happens with Kernel Streaming, WASAPI cannot be directly accessed. WASAPI must be selected in the specific player you choose to use.

For example, when using FooBar, with HIFACE TWO connected to the PC, go to the File/Preferences/Playback /Output tab and select “WASAPI: Speakers (hiFace TWO Audio)” as output device.

Other players will require different settings (see section 6).

6.2.4. Configuring for ASIO with Windows Vista or Windows 7

As happens with Kernel Streaming and WASAPI, ASIO cannot be directly accessed. ASIO must be selected in the specific player you choose to use.

For example, when using FooBar, with HIFACE TWO connected to the PC, go to the File/Preferences/Playback /Output tab and select “ASIO: hiFaceTWO ASIO driver” as output device.

Other players will require different settings (see section 7).

7. Configuring the player for Kernel Streaming: some examples

7.1. FooBar

To use FooBar in KS mode it is necessary to download the DLL for Kernel Streaming from the FooBar2000 website and install it in the Components sub-folder inside FooBar2000 main folder in your hard disk. The DLL can be found at http://www.foobar2000.org/components/view/foo_out_ks (click on Download). It is a zip folder which contains the DLL. Extract it from the zip and copy to the Components folder. Then, restart FooBar, go to the File/Preferences/Playback/Output window and set parameters as in figure 11.

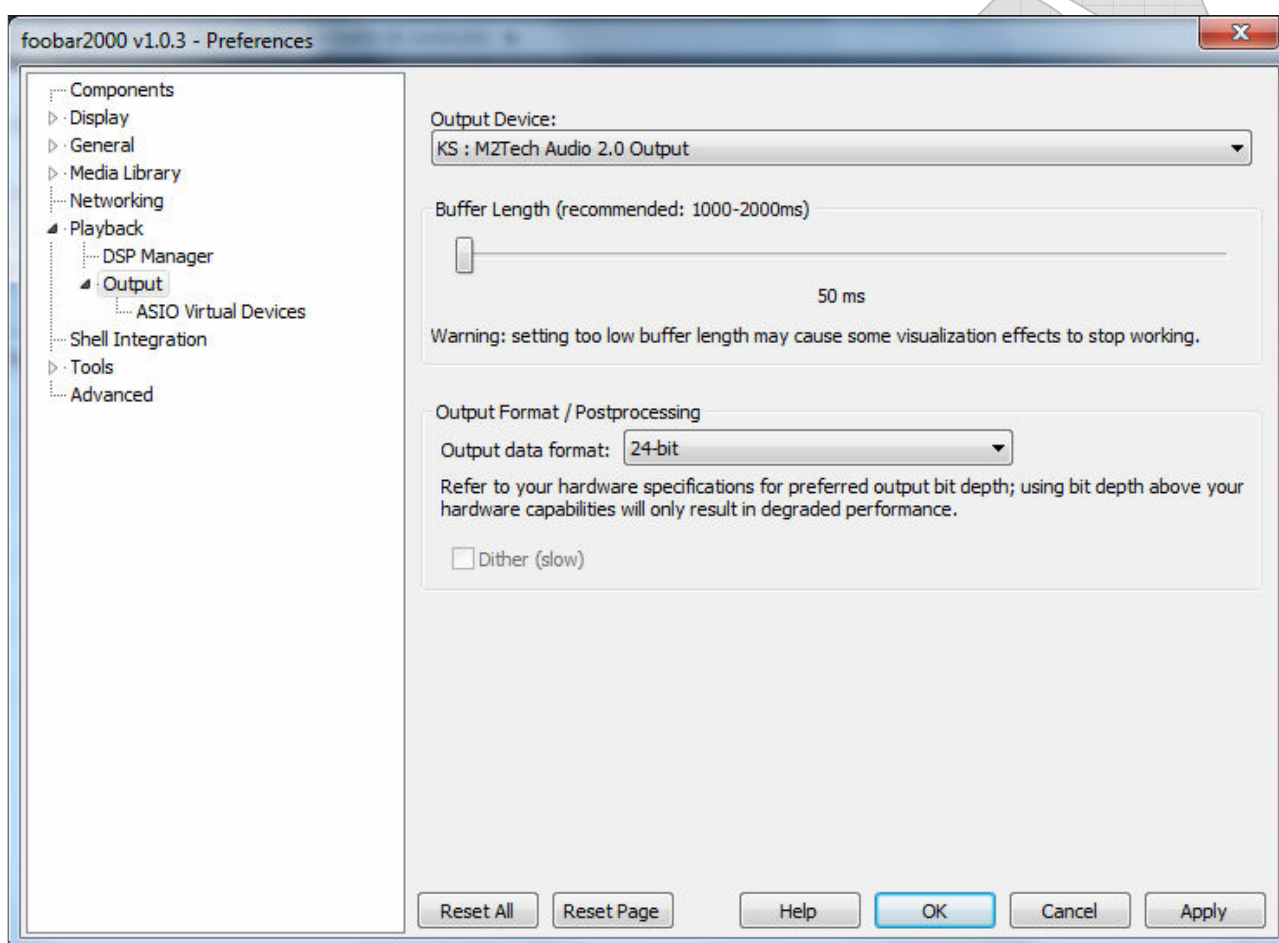


Figure 11

7.2. Winamp and MediaMonkey

These two players are actually the same player with different skins, so they can share the same plug-ins. A freeware plug-in for Kernel Streaming by Steve Monks is available on the Internet (<http://www.stevemonks.com/ksplugin/>) that can be used to enable Kernel Streaming operation with these players.

Download the zip file, extract the dll file and copy it into the Plugins folder inside Winamp main folder.

With hiFace two connected, right-click on Winamp and select Display/Select Plug-ins. The Preferences window of Winamp will open (see figure 12).

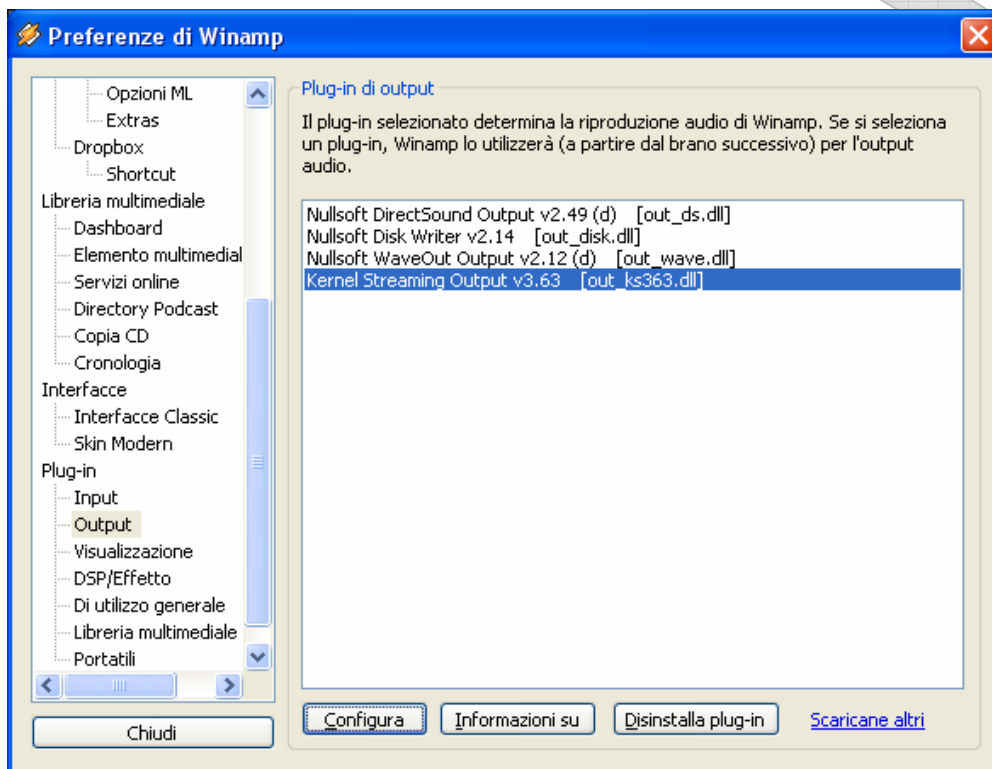


Figure 12

Go to Plug-in/Output and select “M2Tech Audio 2.0 Output”. Then click on Configure button. Choose HIFACE TWO Kernel Streaming in the output device list (Figure 13).

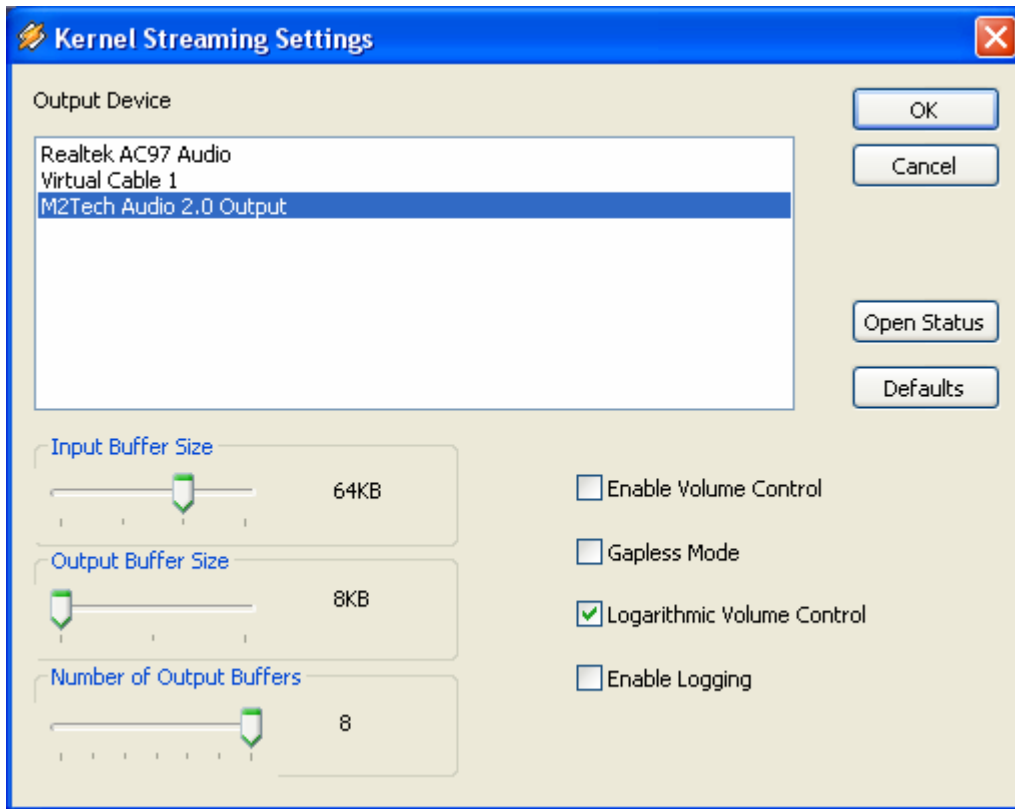


Figure 13

PRELIMINARY

8. Configuring the player for WASAPI: an example

8.1. FooBar

To use FooBar with WASAPI under Windows 7 it is necessary to download the DLL for WASAPI from the FooBar2000 website and install it in the Components sub-folder inside FooBar2000 main folder in your hard disk. The DLL can be found at http://www.foobar2000.org/components/view/foo_out_wasapi (click on Download). It is a zip folder which contains the DLL. Extract it from the zip and copy to the Components folder.

Then, restart FooBar, go to the File/Preferences/Playback/Output window and set parameters as in figure 14.

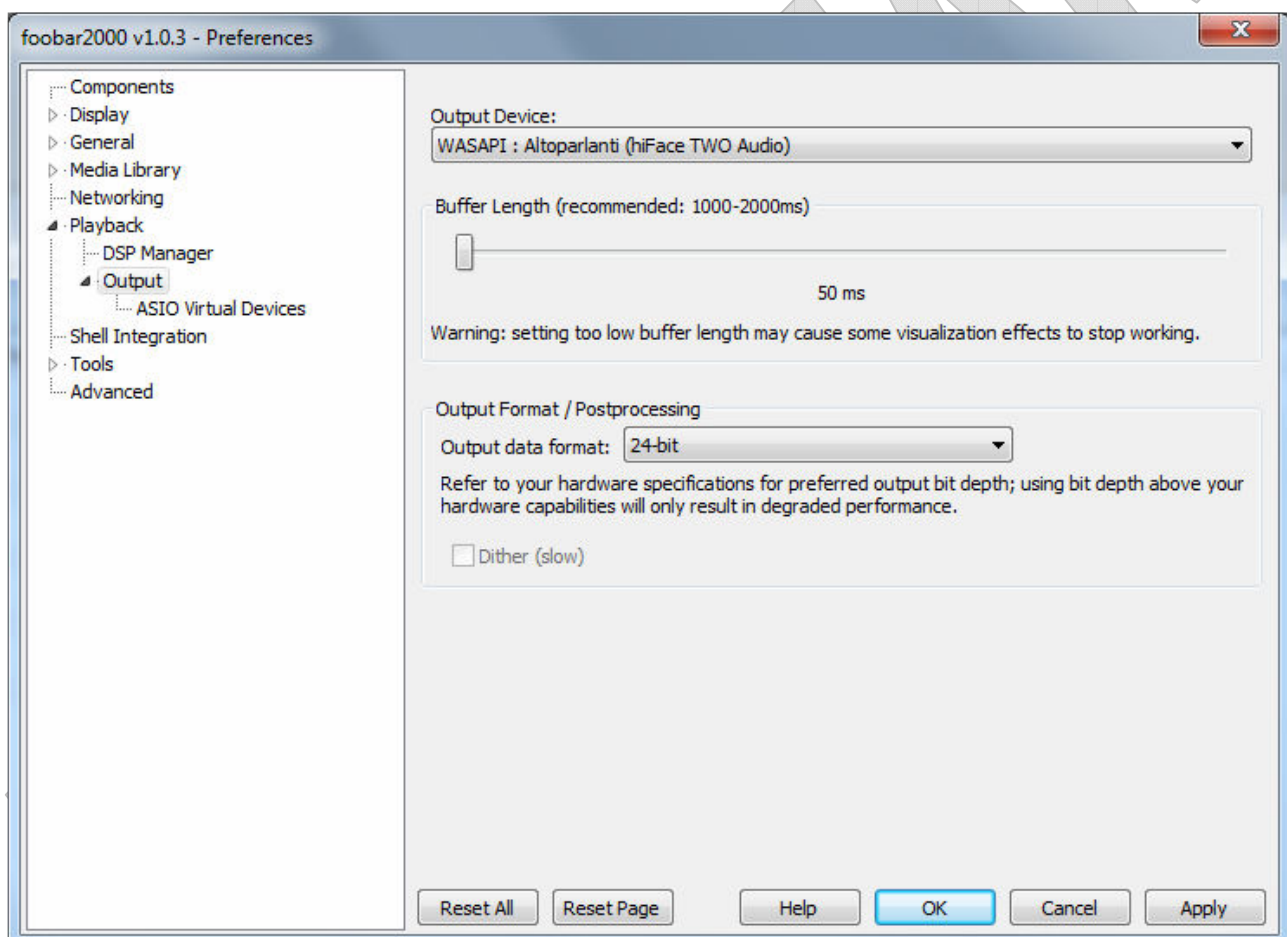


Figure 14

9. Configuring the player for ASIO: an example

9.1. FooBar

To use FooBar with ASIO under Windows 7 it is necessary to download the DLL for ASIO from the FooBar2000 website and install it in the Components sub-folder inside FooBar2000 main folder in your hard disk. The DLL can be found at http://www.foobar2000.org/components/view/foo_out_asio (click on Download). It is a zip folder which contains the DLL. Extract it from the zip and copy to the Components folder. Then, restart FooBar, go to the File/Preferences/Playback/Output window and set parameters as in figure 15.

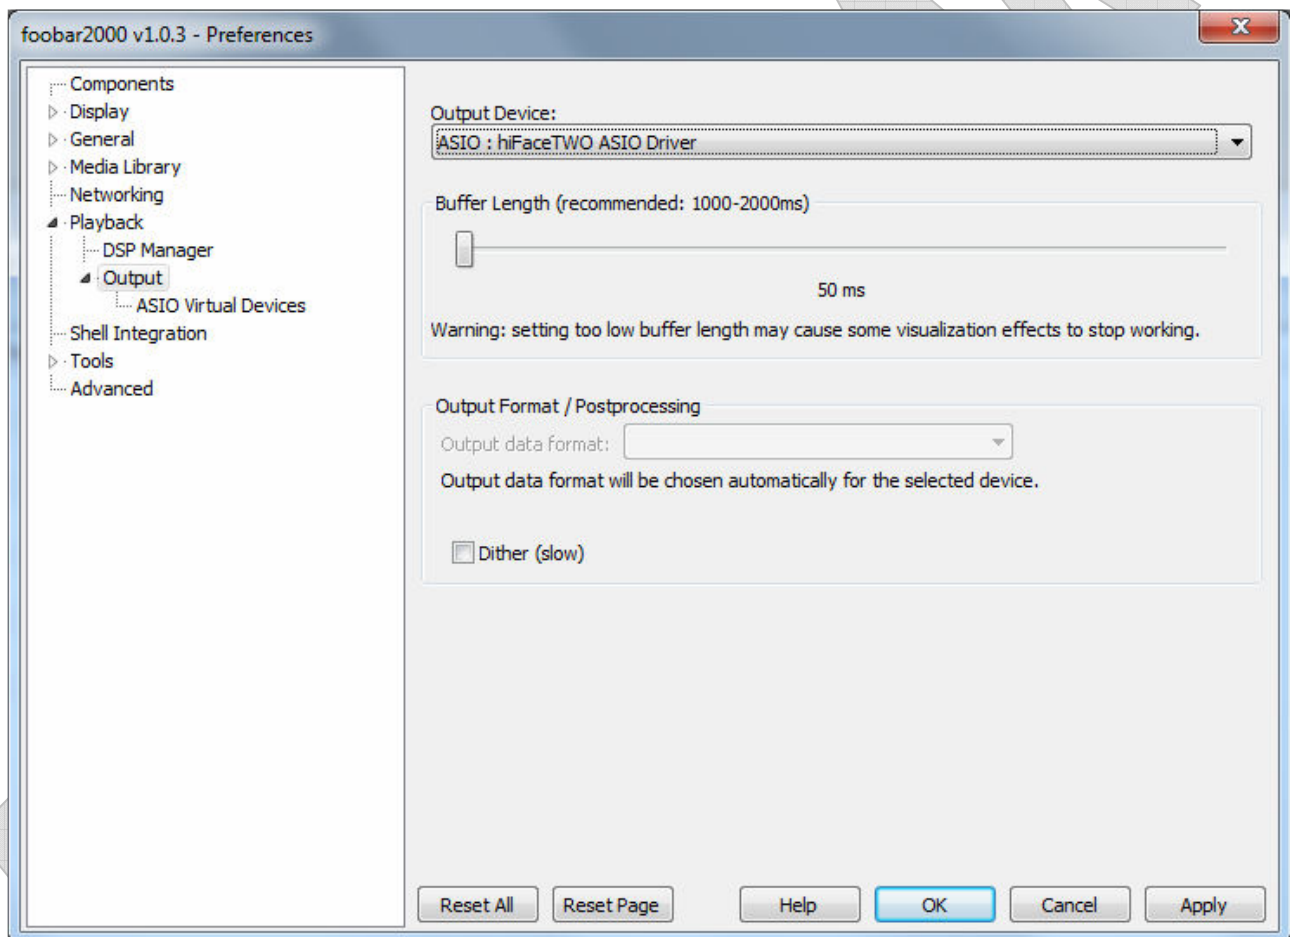


Figure 15

10. Interface Special Features

10.1. Precision oscillators

HIFACE TWO uses two high precision, low phase noise oscillators as time base for data transfer to the DAC. This way, jitter is kept at a minimum, while output transfer is virtually isolated by the USB interface timing low stability.

10.2. Asynchronous transfer mode

HIFACE TWO uses an asynchronous transfer mode to get data from the computer. This way, the actual transfer timing is mastered by the HIFACE TWO, thus avoiding all time uncertainties and thus the jitter caused by the computer USB interface.

10.3. Output connector choice

HIFACE TWO comes in two different versions: with RCA output connector and with 75 Ohms BNC connector. Which one to choose? It mainly depends on the input connector on your DAC or A/V receiver. Most units have an RCA input connector, so the RCA HIFACE TWO is to be chosen. On the other hand, some high performance units have both RCA and BNC input connectors, and some of them only have BNC inputs. The rule is: every time a BNC connector is available, HIFACE TWO BNC should be chosen, as the BNC connection, being it a true 75 Ohms link, give slightly better performance. Should a hybrid cable be available (that is, a cable with an RCA plug on one end and a BNC plug on the other), it is possible to use a HIFACE TWO BNC with a DAC provided with an RCA input, or vice versa. A slight performance increase with respect to an all-RCA link can be obtained.

10.4. Powering the HIFACE TWO with an external power supply

HIFACE TWO is powered by the USB bus, so it needs no external power supply. Its internal regulators ensure correct operation of the various sub-circuits, particularly the internal high precision oscillators. Anyway, user may want to power the HIFACE TWO with a power supply giving clean current to the device. This can be done using adapting cables purposely made for that and available on the computer market. Please use a 5V power supply with 500mA current capability.

11. Technical Specifications

Sampling frequencies:	44.1, 48, 88.2, 96, 176.4, 192kHz
Resolution:.....	16 to 24 bits
USB:	2.0 Audio class
Compatibility:	Windows XP ⁽¹⁾ , Windows Vista (32 & 64 bits), Windows 7 (32 & 64 bits); OSX (10.6.4 and later); Linux (ALSA 1.0.24 or later)
Internal clock precision:	+/-10ppm 0 to 60°C, 2ppm typical @ 25°C
S/PDIF output voltage:.....	500mVpp +/-0.1V @ 75 Ohms
Minimal requirements:.....	1.3GHz CPU clock, 1GB RAM, 2.0 USB port
Size.....	110x20x23mm (with connectors)
Weight:.....	40g

Note:

1) DS and ASIO modes only.